


# PowerLite® Home Cinema 700

## Quick Setup

Before using the projector, read these instructions and the safety instructions in the *User's Guide* on your projector CD-ROM.

### 1 *Unpack the projector*


You should have the following items:

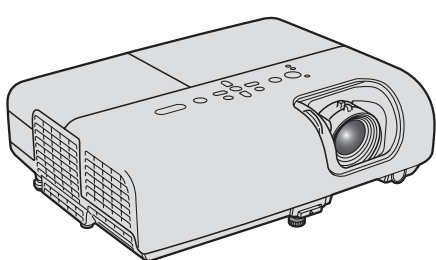

Projector



Power cord

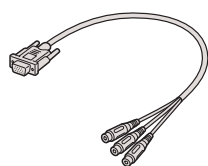

Component-to-VGA  
adapter



User's Guide  
CD-ROM



Projector  
remote control



Batteries




Interface label stickers  
(Included for Canada only)

**Canada only:** For French speakers, remove sticker(s) from the interface label backing sheet and place over corresponding text on the control panel.


### 2 *Choose a location*

The easiest way to set up your projector is to place it on a table in front of your screen or wall, or on a high shelf behind you. See the *User's Guide* for other ways of setting up the projector.

#### Table

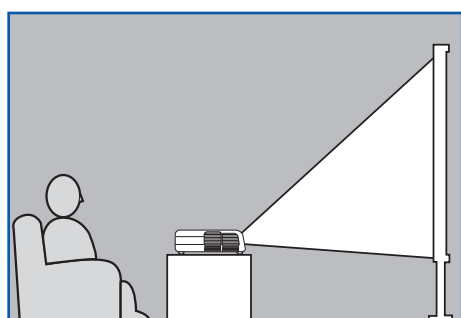

#### Shelf

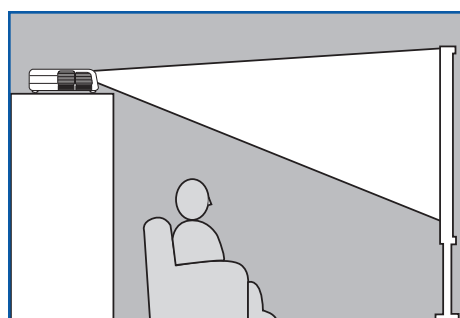

The distance between the projector and the screen generally determines the size of the image, but the size can also vary depending on the aspect ratio (image shape), how you zoom into the image, and whether you've adjusted other image settings. Depending on the image settings you've chosen, you can place the projector anywhere from 33 to 407 inches (84 to 1035 cm) from the screen.

Use the tables in the *User's Guide*, or the Image Size or Projection Distance calculator on the Multimedia Projectors page on Epson's website to help you determine the proper projection distance.




\*411537000\*

**EPSON®**  
EXCEED YOUR VISION


## 3 *Set up the remote control*

- 1 Remove the battery cover.
- 2 Insert the batteries.
- 3 Replace the battery cover.

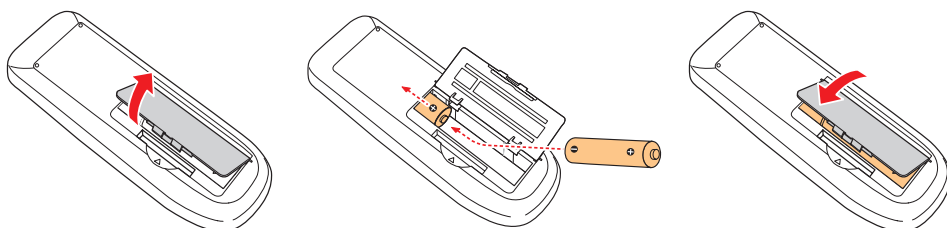



## 4 *Plug in and turn on*


- 1 Open the **A/V Mute** slide (lens cover).

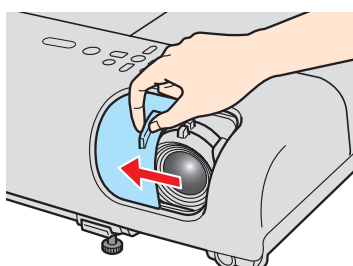

- 2 Connect the power cord to the projector and plug the other end into an electrical outlet.

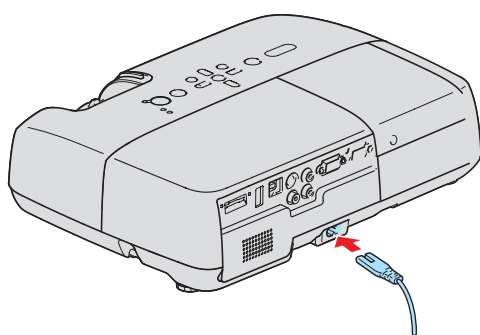

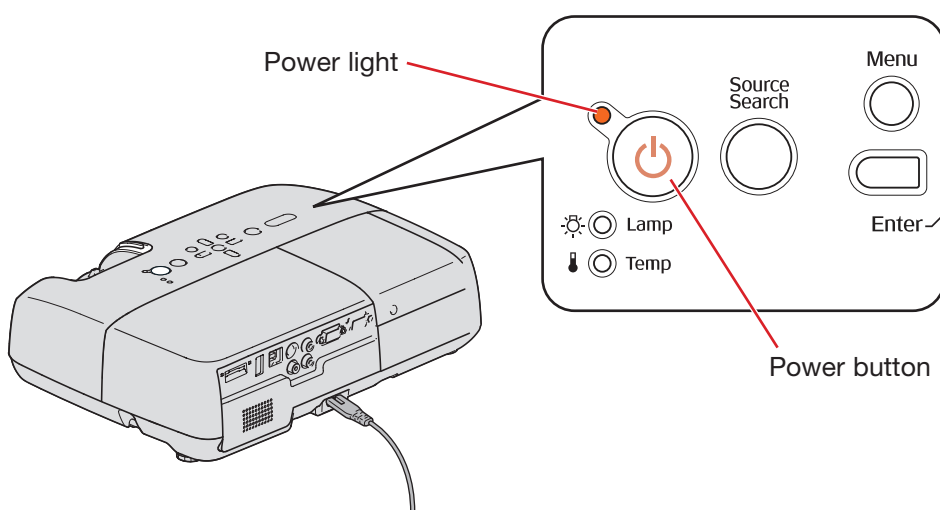


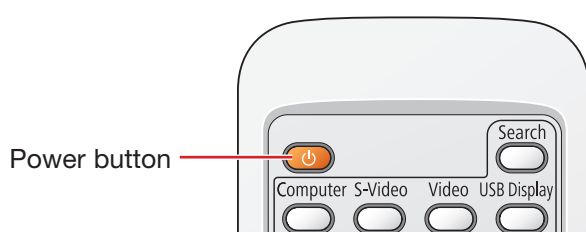
The  power light on the projector turns orange.






- 3 Connect your video source, as described to the right.

- 4 Turn on your computer or video source.

- 5 Press the  power button on the projector or remote control. The projector beeps, the  power light flashes green, and the projector warms up. When the  power light stays green, the projector is ready for use.



## Turning off the projector

- 1 If you're using a computer, shut it down first, while you can still see the display.
- 2 Press the  power button on the projector or remote control.
- 3 When you see the confirmation message, press the  power button again. The projector beeps twice and the  power light turns orange.

With Epson's Instant Off® technology, there's no cool-down period. When you're done, just unplug the projector and it's ready to travel.


# 5 *Connect your video source*

Follow these instructions to connect the projector to your video equipment using an HDMI cable or component video cable and adapter. For instructions on using other connection options, or connecting to a computer, see the *User's Guide* on your CD-ROM.

## Connecting with an HDMI cable

For the best image and sound quality, connect your video equipment to the HDMI port, if possible.

- 1 Connect an HDMI cable (not included) to the HDMI port on your video player and the **HDMI** port on the projector.

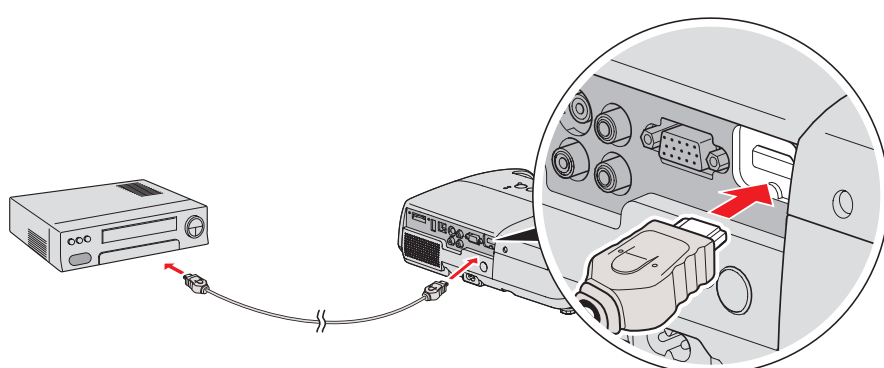


- 2 Start your video or presentation. Use the **Source Search** button on the projector or the **Search** button on the remote control to select the HDMI source, if necessary.

## Connecting with a component video cable

If your video equipment has component video connectors (three connectors labeled either Y/Cb/Cr or Y/Pb/Pr), you can use a component video cable (not included) along with the included component-to-VGA adapter.

- 1 Connect your component video cable to your video device.
- 2 Connect the component-to-VGA adapter that came with your projector to the component video cable.
- 3 Connect the VGA end of the adapter to the projector's **Computer (Component Video)** port.

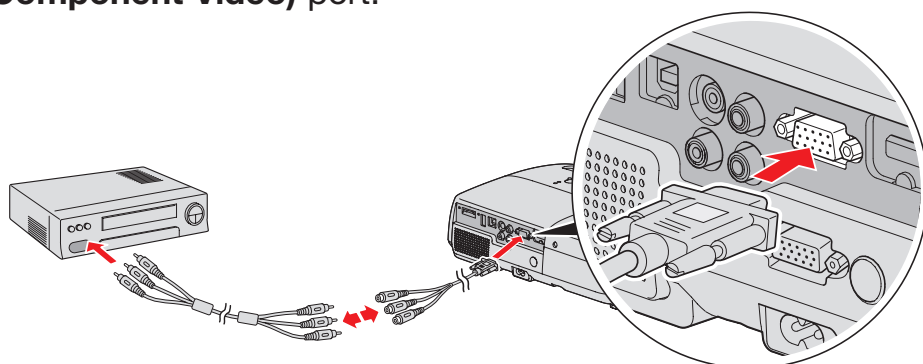


- 4 You can connect an optional audio cable if you want to play sound through the projector. See the *User's Guide* on your CD-ROM for instructions.
- 5 Start your video or presentation. Use the **Source Search** button on the projector or the **Search** button on the remote control to select the video source, if necessary.

Turn over






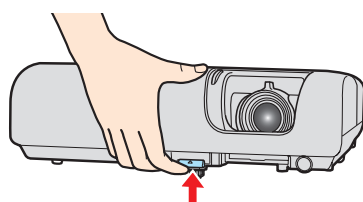

# 6 *Adjust the image*


- 1 To raise the image, press the foot release lever and lift the front of the projector. Release the lever to lock the foot in position.

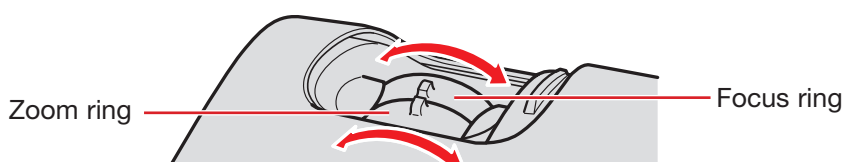

- 2 Rotate the focus ring to sharpen the image. To reduce or enlarge the image, rotate the zoom ring.



- 3 If your image looks like  or , first make sure the projector is facing the screen squarely. Then, if necessary, press the  and  buttons on the projector's control panel until the image looks correct.
- 4 To select the best color mode, press the **Color Mode** button on the remote control. Press it repeatedly to move through the options.

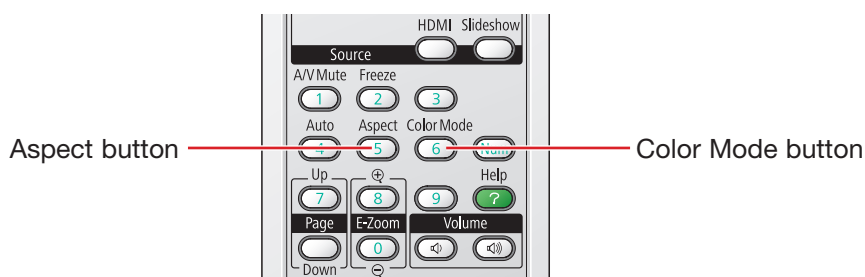

- 5 If the image is stretched or cut off, press the **Aspect** button until the image looks correct.

See your *User's Guide* on the CD-ROM for more information about image adjustments.

# 7 *Install User's Guide and register your projector*


- 1 Insert the projector CD-ROM in your drive. If the installer doesn't open automatically, double-click the **Epson** CD-ROM icon, then double-click the **Epson** installer icon.
- 2 Select **English**.
- 3 Follow the instructions on the screen to register.

**NOTE** You can also register at [www.epson.com/webreg](http://www.epson.com/webreg).

- 4 After you register the projector, click **User's Guide** to install it. (If you are using Windows and don't already have Adobe® Reader®, click **Adobe Reader** and follow the on-screen instructions to install it.)
- 5 When you're done, click **Exit**.

To open your *User's Guide*, double-click the **PL HC700 User's Guide** icon on your desktop.

# Remote Control Map

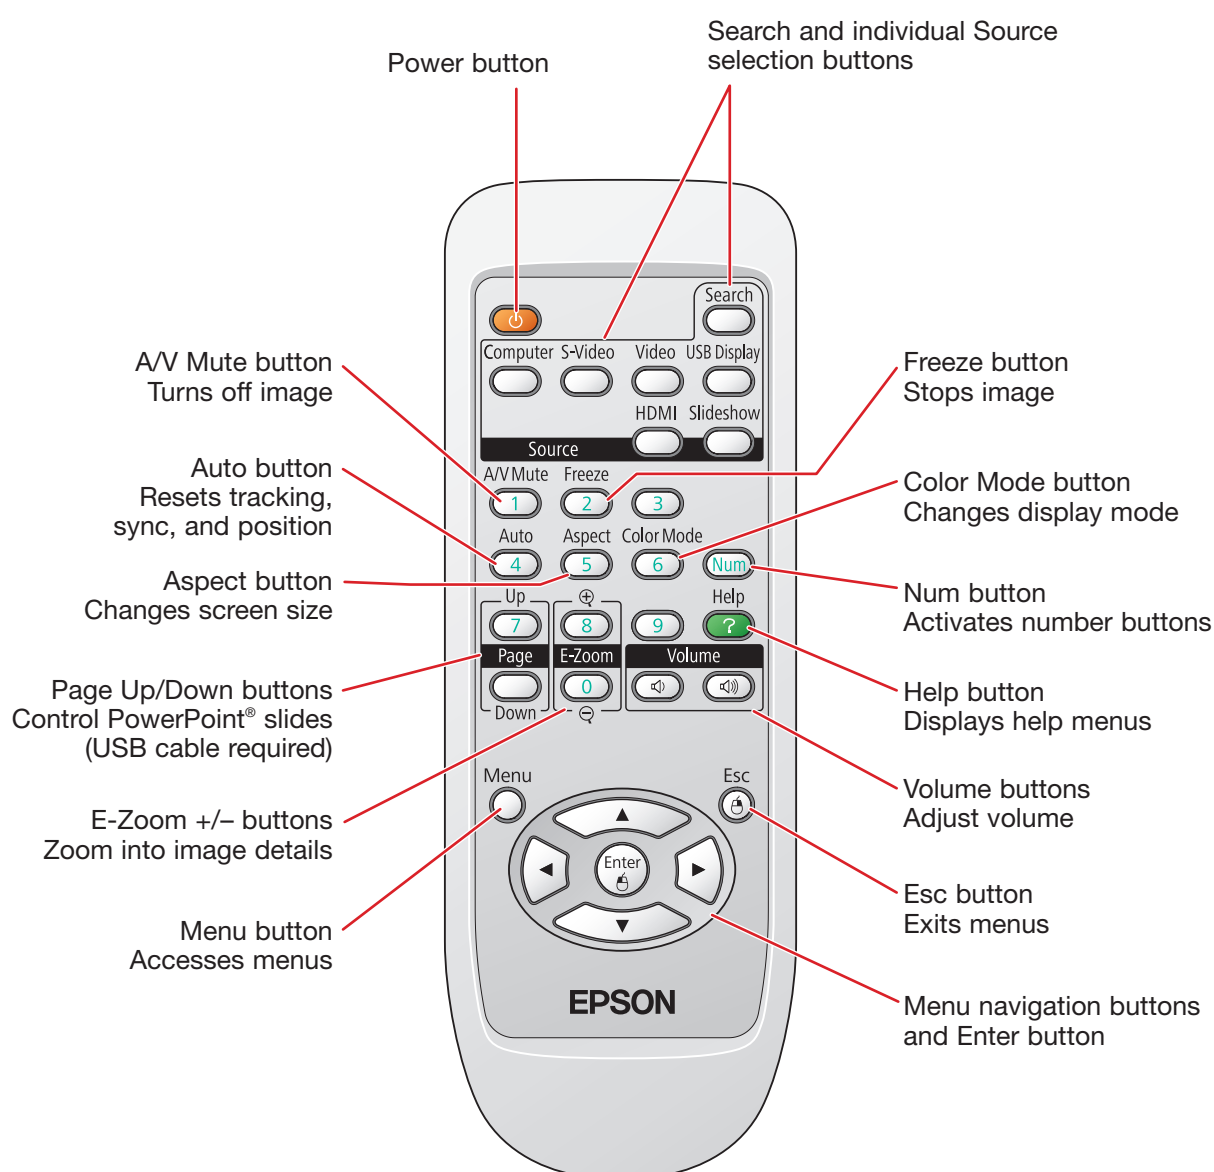

## Where to get help

### Internet support

Visit Epson's support website at **[epson.com/support](http://epson.com/support)** and select your product for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

### Speak to a support representative

To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the Epson PrivateLine Support card that came with your projector. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of the following numbers. (Toll or long distance charges may apply.)

**U.S.:** (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday-Friday

**Canada:** (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday-Friday

Days and hours of support are subject to change without notice.


### Purchase supplies and accessories

You can purchase screens and other accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at **[www.epsonstore.com](http://www.epsonstore.com)** (U.S. sales) or **[www.epson.ca](http://www.epson.ca)** (Canadian sales).

# Troubleshooting

## If you see a blank screen

If you see a blank screen or the **No signal** message after turning on your computer or video source, check the following:

- Make sure the  power light on the projector is green and not flashing and the **A/V Mute** slide (lens cover) is open.
- Make sure the cables are connected correctly. (See the *User's Guide* for more information.)
- If you've connected more than one video source, you may need to press the **Source Search** button on the projector or the **Search** button on the remote control to select the one you want to watch. (Allow a few seconds for the projector to sync up after pressing it.)

## If the picture is taller on one side

The projector is set at an angle to the screen. Face it squarely toward the screen.

Epson and Instant Off are registered trademarks and Epson Exceed Your Vision is a registered logomark of Seiko Epson Corporation. PowerLite and PrivateLine are registered trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2008 Epson America, Inc. 7/08

Printed in XXXXXX



CPD-26345